

Ex9C40~65



Contactor
Stykač
Stýkač
Stycznik
Contactor
Leistungsschütz
Contacteur
Контактор
Контактор
Motorni kontaktor

IEC/EN 60947-4-1

Mounting instructions

Montážní návod

Montážne inštrukcie

Instrukcja montażu

Instruçiuni de asamblare

Montageanweisung

Instructions de montage

Инструкция по монтажу

Monteringsanvisning

Istruzioni di montaggio

Instrucciones de montaje

Összeszerelési útmutató

Asennusohjeita

Montage-instructies

Instruções de montagem

Navodila za montažo

Οδηγίες Εγκατάστασης

Инструкции за инсталиране

Monteringsvejledningen

Montažu upute

Surinkimo instrukcijos

Instalēšanas instrukcijas

Скупштина упутство

Paigaldusjuhendid

Caution: Installation by electricians only

Varování: Montáž pouze osobou s elektrotech. kvalifikací

Varovanie: Montáž iba osobou s elektrotech. kvalifikáciou

Uwaga: Montaż tylko przez uprawnionych instalatorów

Atenție: Instalare numai de către electricieni


Vorsicht: Montagenur durch Elektrofachkräfte

Attention: Montage uniquement par un électricien


Осторожно: Монтаж только электрика

NOARK

B



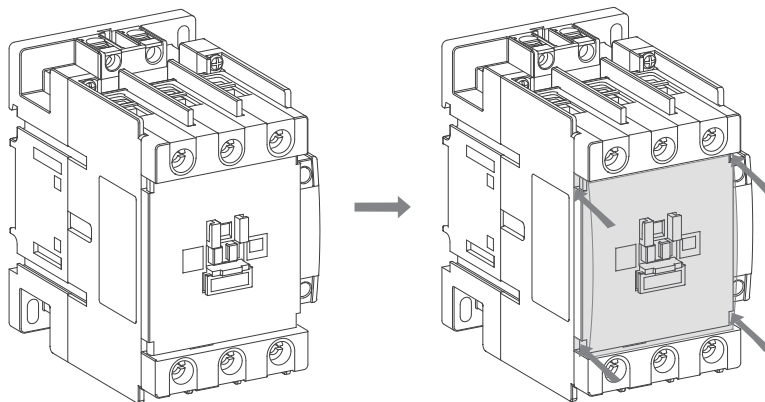






C

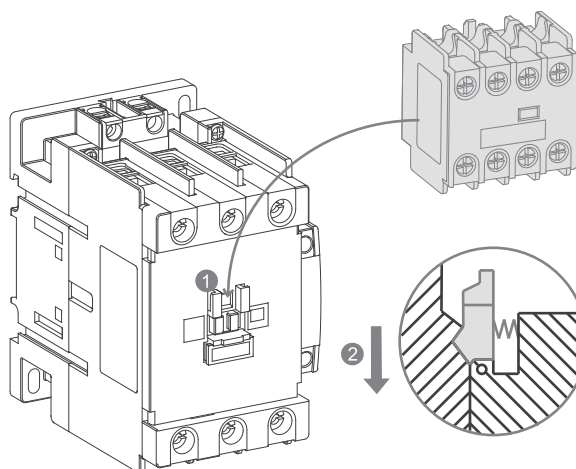

A

Ex9C40/Ex9C50/Ex9C65

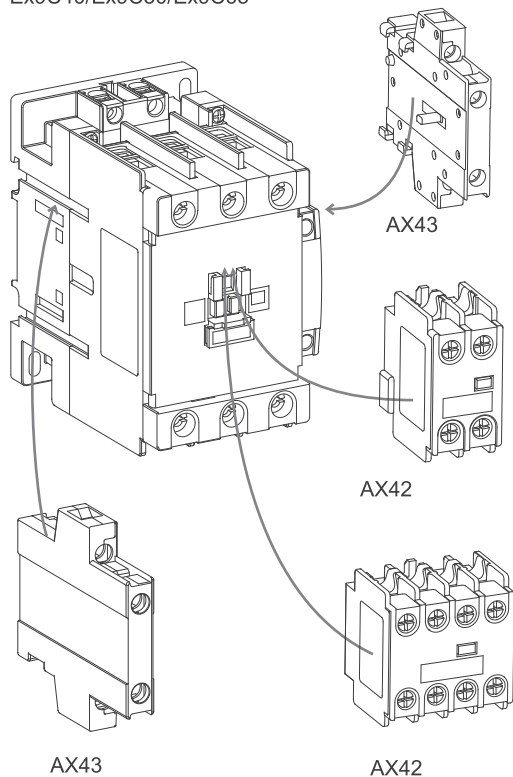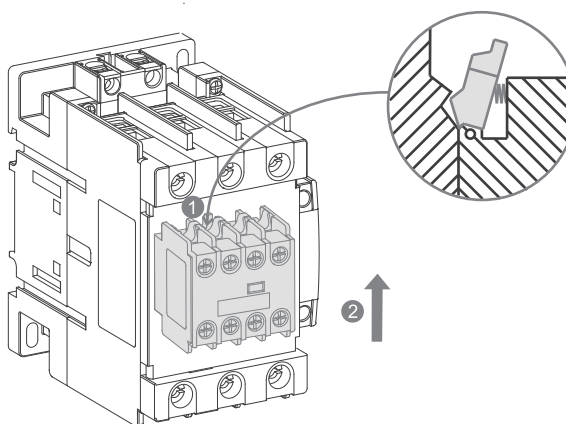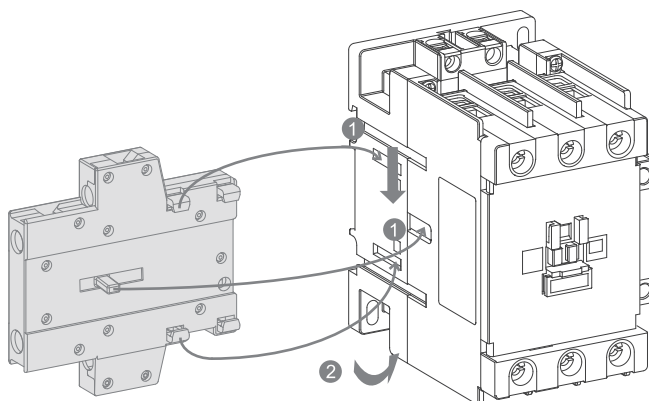

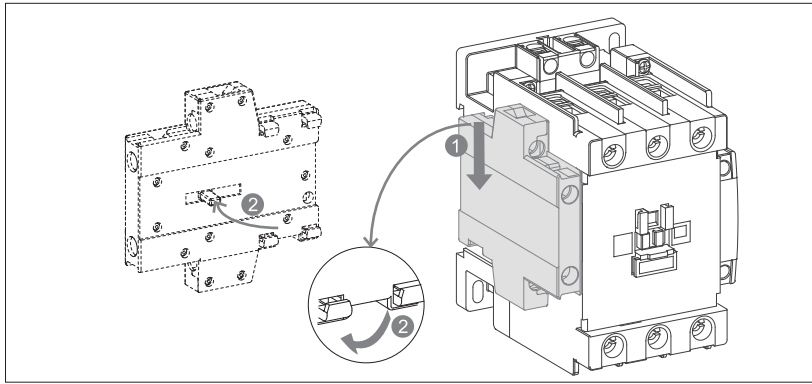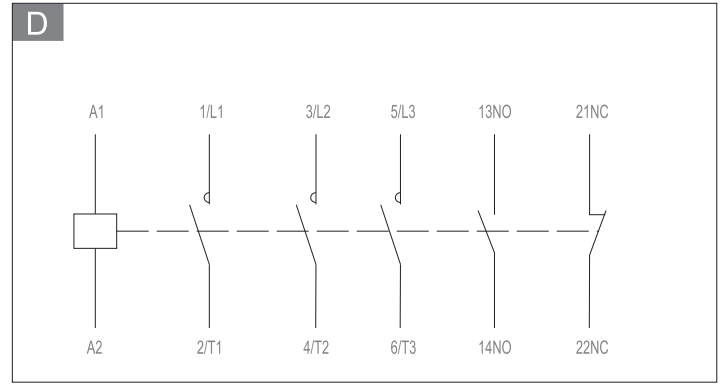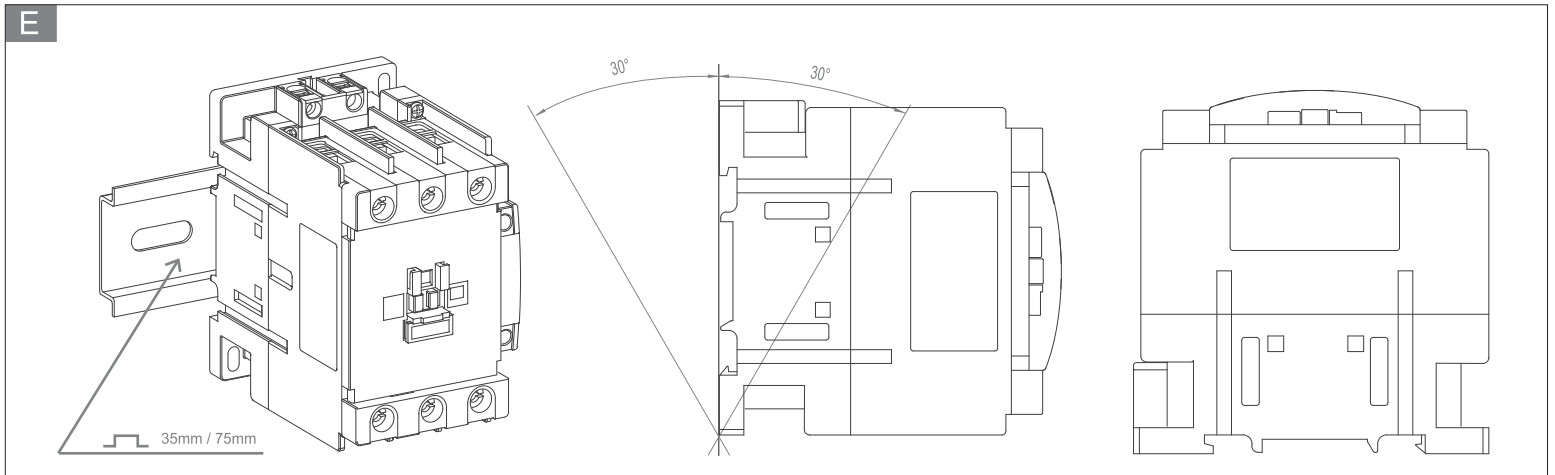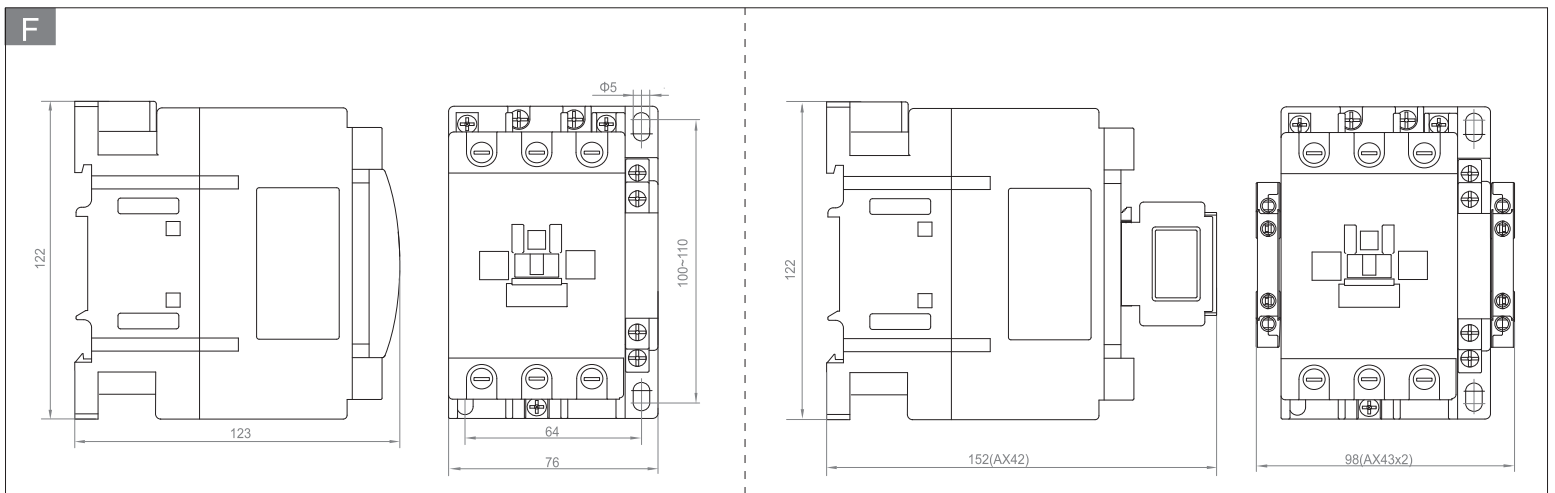

G

	 6N·m	 Z2	 mm ² 2.5~25	 mm ² 2.5~25	 mm ² 2.5~25	 mm ² 2.5~25	 mm ² 2.5~25	 mm ² 2.5~25	 mm ² 2.5~25	 mm ² 2.5~25
	 1.7N·m	 Z2	 mm ² 1~4	 mm ² 1~4	 mm ² 1~4	 mm ² 1~2.5	 mm ² 1~4	 mm ² 1~2.5	 mm ² 1~4	 mm ² 1~4