

Ex9C80~100



Contactor
Stykač
Stýkač
Stycznik
Contactor
Leistungsschütz
Contacteur
Контактор
Контактор
Motorni kontaktor

IEC/EN 60947-4-1

Mounting instructions

Montážní návod

Montážne inštrukcie

Instrukcja montażu

Instruçiuni de asamblare

Montageanweisung

Instructions de montage

Инструкция по монтажу

Monteringsanvisning

Istruzioni di montaggio

Instrucciones de montaje

Összeszerelési útmutató

Asennusohjeita

Montage-instructies

Instruções de montagem

Navodila za montažo

Οδηγίες Εγκατάστασης

Инструкции за инсталиране

Monteringsvejledningen

Montažu upute

Surinkimo instrukcijos

Instalēšanas instrukcijas

Скупштина упутство

Paigaldusjuhendid

Caution: Installation by electricians only

Varování: Montáž pouze osobou s elektrotech. kvalifikací

Varovanie: Montáž iba osobou s elektrotech. kvalifikáciou

Uwaga: Montaż tylko przez uprawnionych instalatorów

Atenție: Instalare numai de către electricieni


Vorsicht: Montagenur durch Elektrofachkräfte

Attention: Montage uniquement par un électricien


Осторожно: Монтаж только электрика

NOARK

B



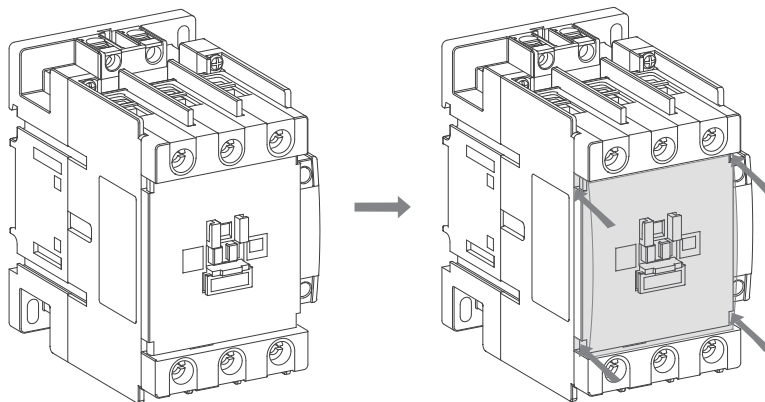






C

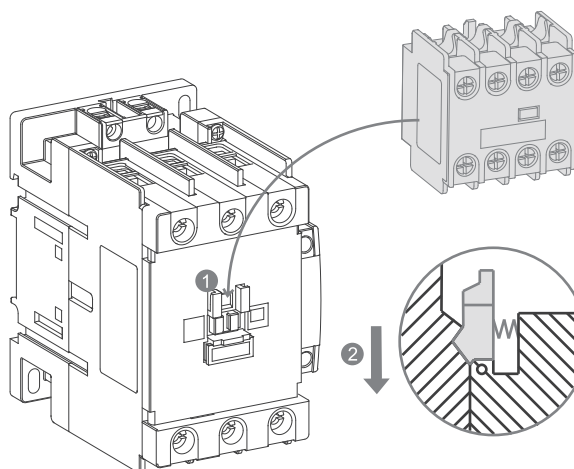

A

Ex9C80/Ex9C100

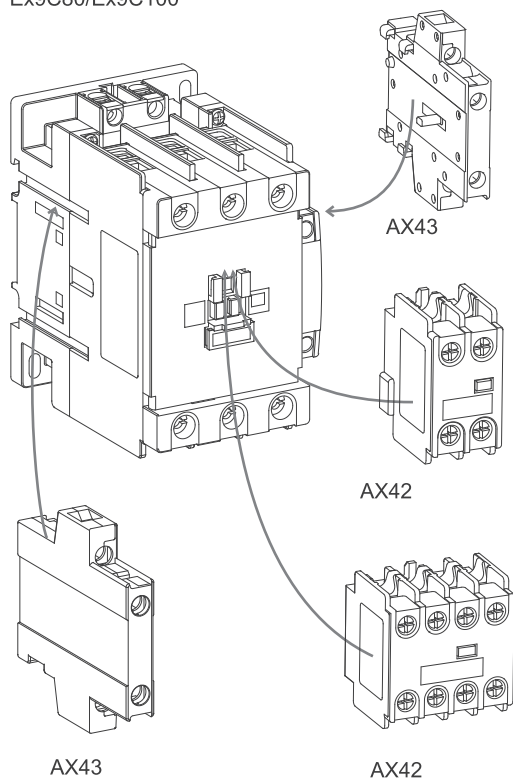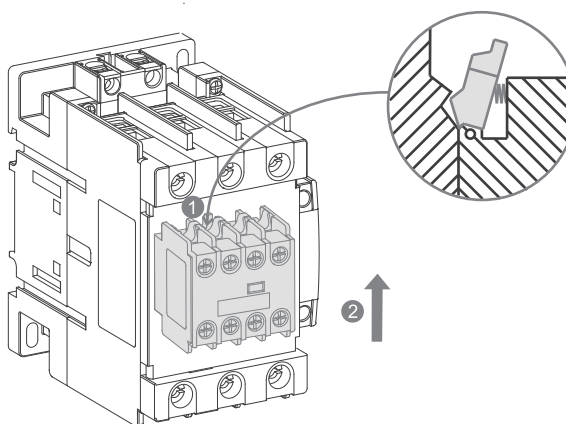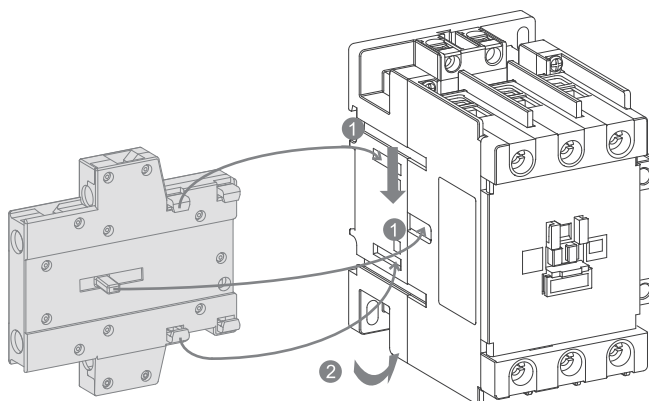

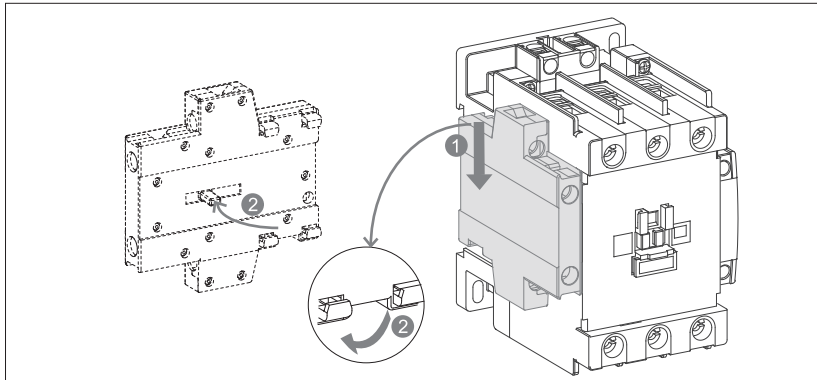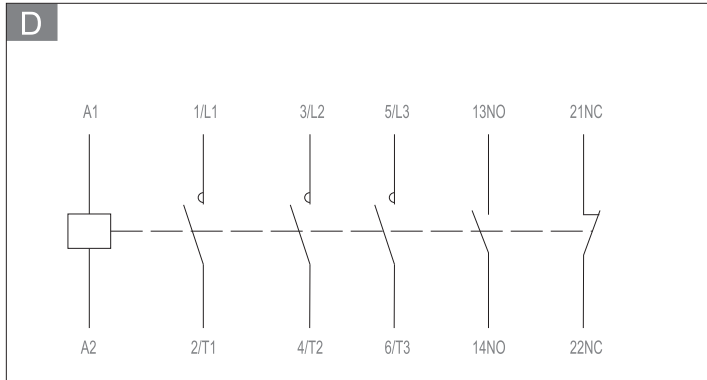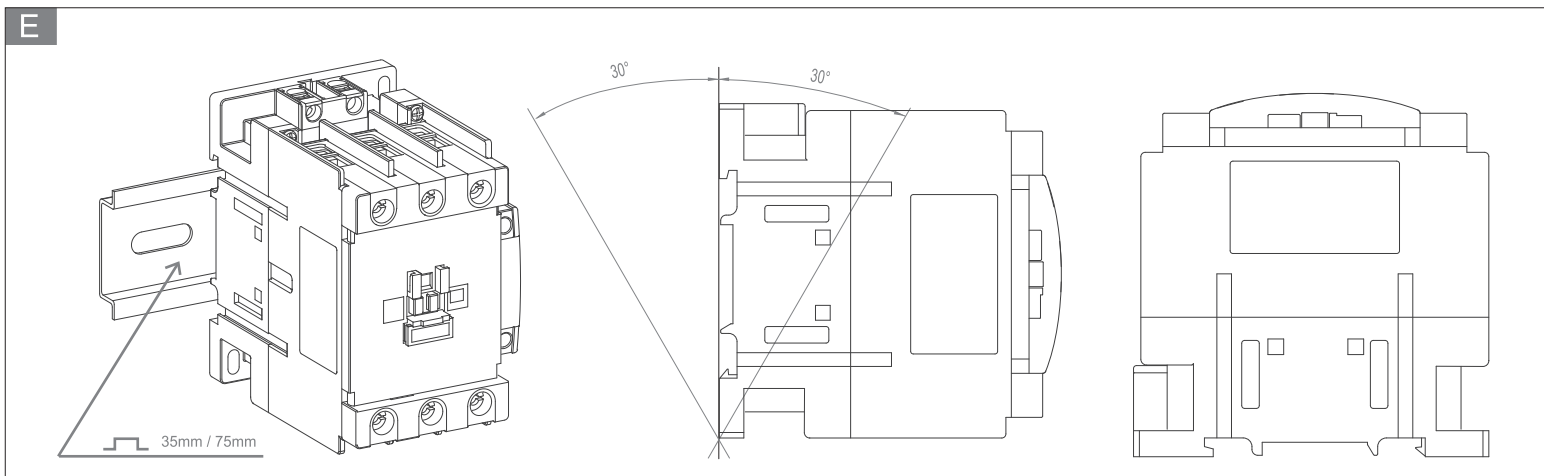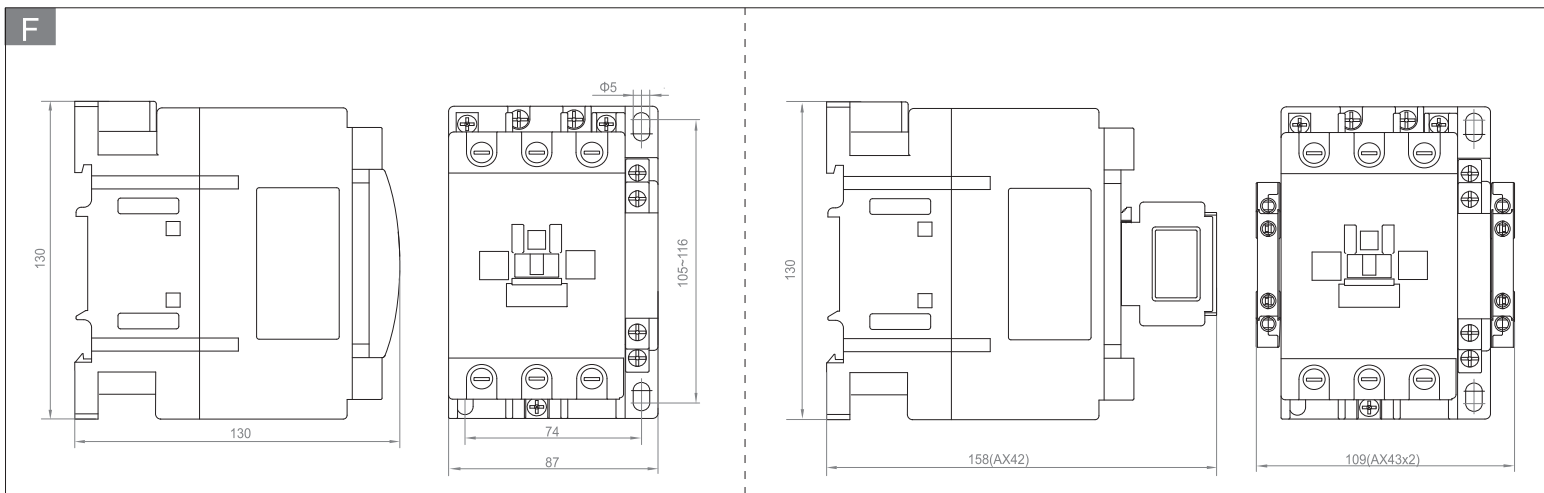

G

	<p>M10</p> <p>9N·m</p>	<p>Z2</p>	<p>mm²</p> <p>4~50</p>	<p>mm²</p> <p>4~50</p>	<p>mm²</p> <p>4~50</p>	<p>mm²</p> <p>4~50</p>	<p>mm²</p> <p>4~50</p>	<p>mm²</p> <p>4~50</p>	<p>mm²</p> <p>4~50</p>	<p>mm²</p> <p>4~50</p>
	<p>M3.5</p> <p>1.7N·m</p>	<p>Z2</p>	<p>mm²</p> <p>1~4</p>	<p>mm²</p> <p>1~4</p>	<p>mm²</p> <p>1~4</p>	<p>mm²</p> <p>1~2.5</p>	<p>mm²</p> <p>1~4</p>	<p>mm²</p> <p>1~2.5</p>	<p>mm²</p> <p>1~4</p>	<p>mm²</p> <p>1~4</p>