
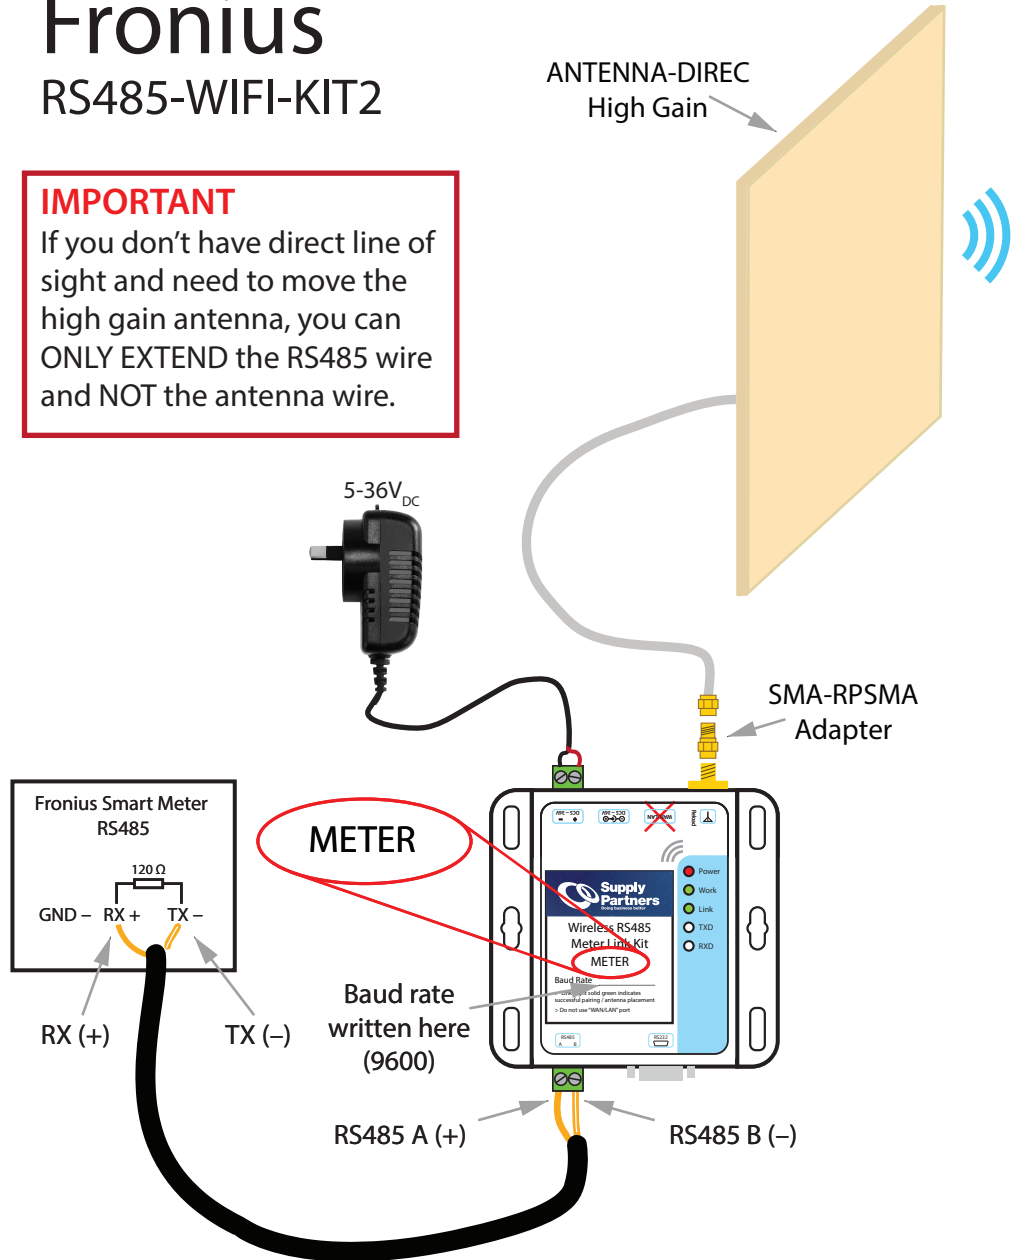


Fronius

RS485-WIFI-KIT2

IMPORTANT

If you don't have direct line of sight and need to move the high gain antenna, you can **ONLY EXTEND** the RS485 wire and **NOT** the antenna wire.

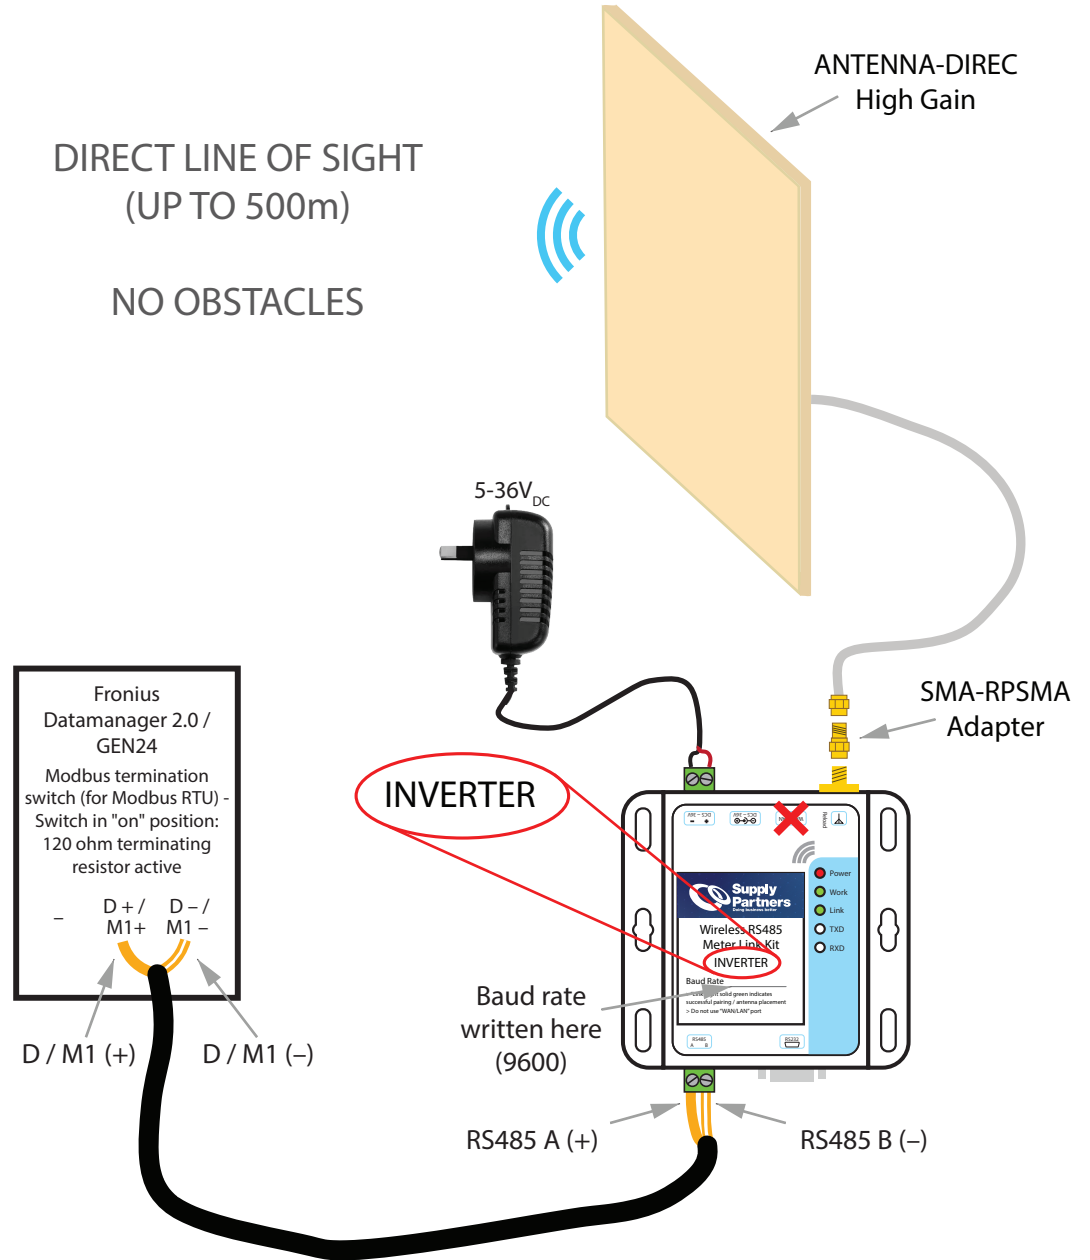

	63A/1PH	63A/3PH	50kA-3	240-3 UL	480-3 UL
RX +	33	A	33	D+	D+
RX -	34	B	34	D-	D-

Important

Once installed, if the Link light is ON but the meter isn't registering with the inverter, please restart the inverter