



Quick Guide for DDSU666 100A/40mA Dual-Channel Meter Connection

This quick guide describes the procedure to connect the DDSU666 100A/40mA dual-channel meter to the SAJ inverters and the grid and to set the export limit function on the elekeeper App.


Before you start

- Prepare a standard network cable with an RJ45 terminal on both cable ends.

Procedure

Step 1. Connect one end of the network cable to the meter communication port on the SAJ single-phase AC-coupled or hybrid inverters. Connect the other cable end to the port on the meter communication cable.

Step 2. Clip the current transformers (CT) onto the AC L lines as the following figure shows. Point both CTs to the on-grid loads.

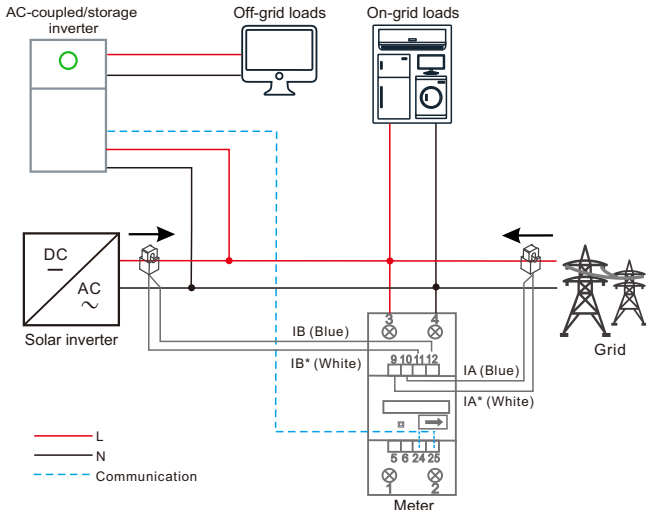

Step 3. Log in to the elekeeper App and connect to the AC-coupled or hybrid inverter through Bluetooth connection. On the **Device** page, select the inverter.

